


System Components: Manifolds

Manifolds:


- Two- to four-bottle configuration
- Bottles empty sequentially (front to back) for easy restocking
- Manifolds are connectable for any required bottle reserve
- Quick-disconnect fittings on manifolds mean reconfiguring bottle reserve is quick and easy
- Easybar bottle stoppers fit inside the bottleneck and prevent spillage when inverting or removing bottles
- No air touches the liquid from the time the bottle is inverted into the manifold until it is dispensed from the tower or gun ensuring quality of product
- Slanted manifold allows for complete drainage without removing the plastic nozzle inserts

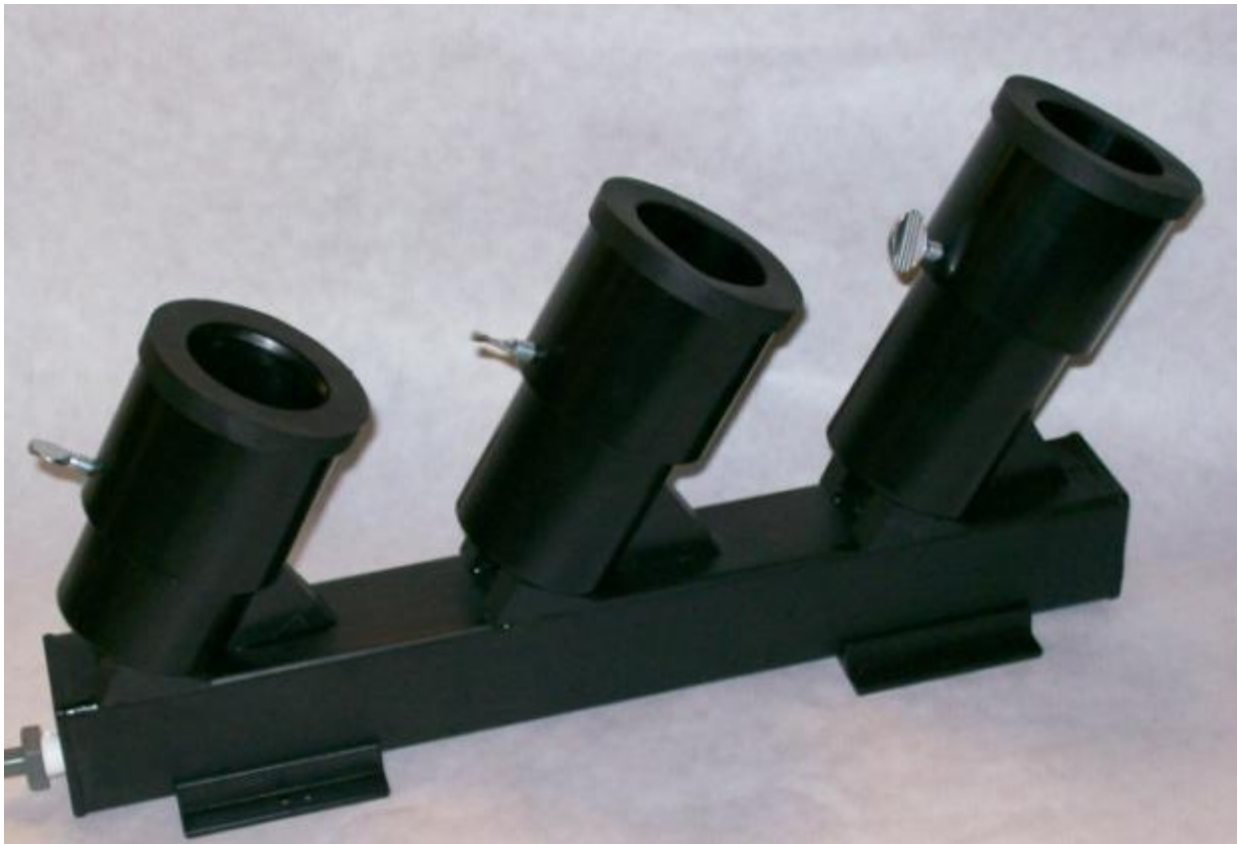

DIMS: 3"W x 6 1/2"H
2-Bottle: 11"D
3-Bottle: 15 1/2"D

Easybar CLCSIIT is certified to ANSI/NSF Standard 18 - Jan 2008

FRONT VIEW

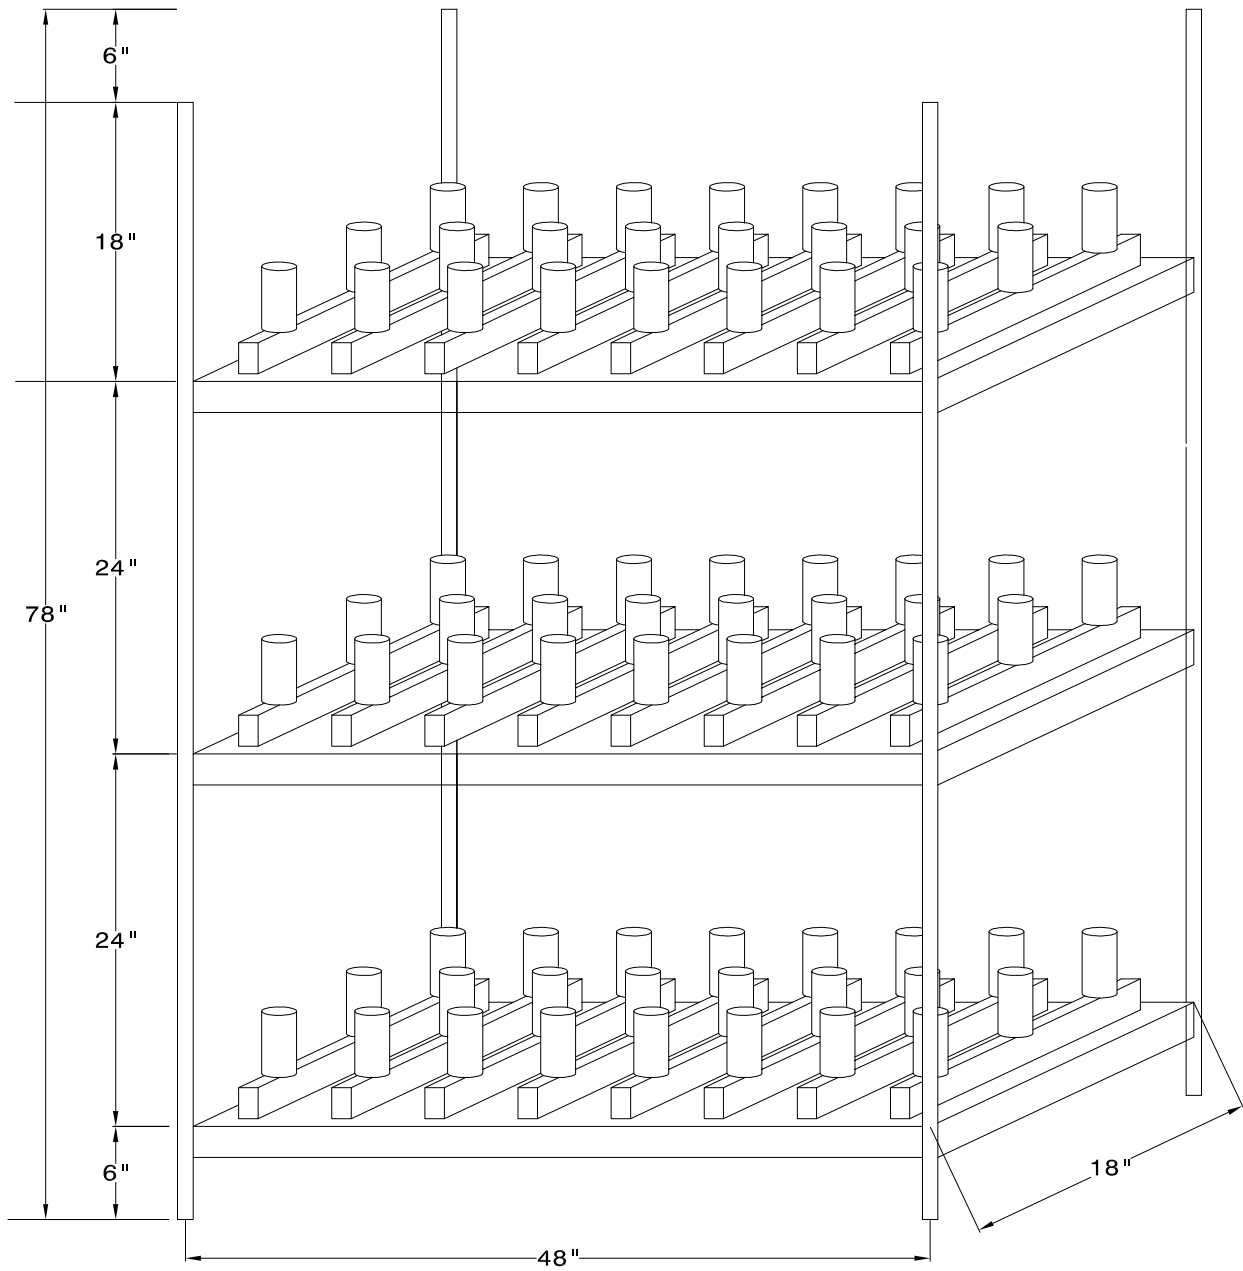

TOP VIEW (ARCHITECTURAL)

